

RAPID
BIKERACING

RAPID
BIKEEVO

KTM 125 Duke / RC 10-20 (Rapid Bike Evo only)

KTM 200 Duke 11-17 (Rapid Bike Evo only)

KTM 390 Duke / RC 12-16

INSTALLATION INSTRUCTIONS



Attention: For a correct RB feeding voltage, check the operation of all motorbike electrical system components (lights, fuse, stock connectors, etc.).

1. Turn ignition off.
2. Remove the seat and the fuel tank.

Injection section

3. Locate and disconnect the grey 2 pin connector placed under the fuel tank (Fig.1).

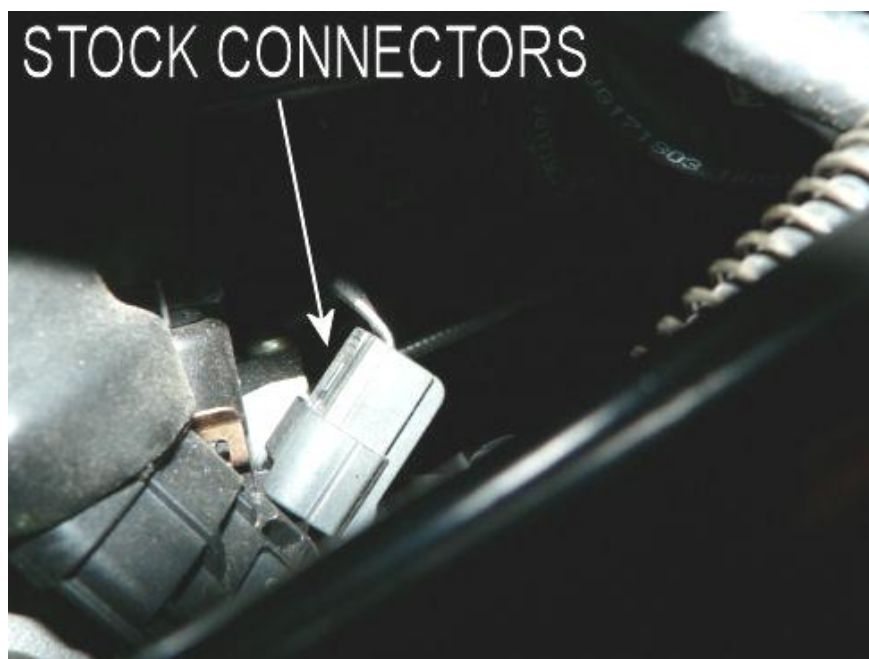


Fig.1

4. Connect the Rapid Bike connectors in-line of the stock connectors (Fig.2).

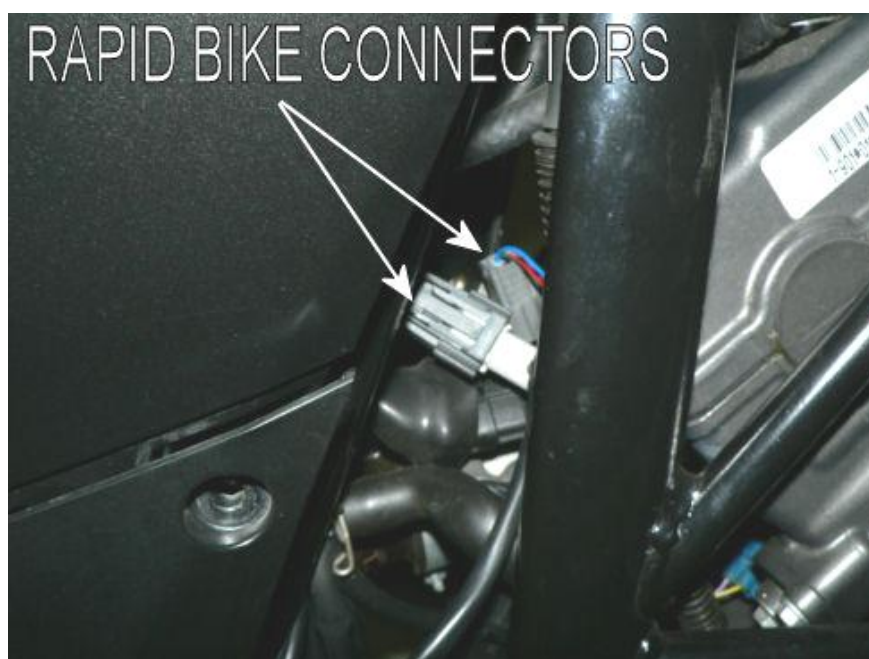


Fig.2

T.P.S. section

5. Locate the black 3 pin connector placed under the fuel tank on the right hand side of the bike (Fig.3).

**Fig.3**

6. Connect the green wire of the Rapid Bike wiring to the green/yellow striped wire (marked as 1) of the stock connector using the posi-tap connector (Fig.4).

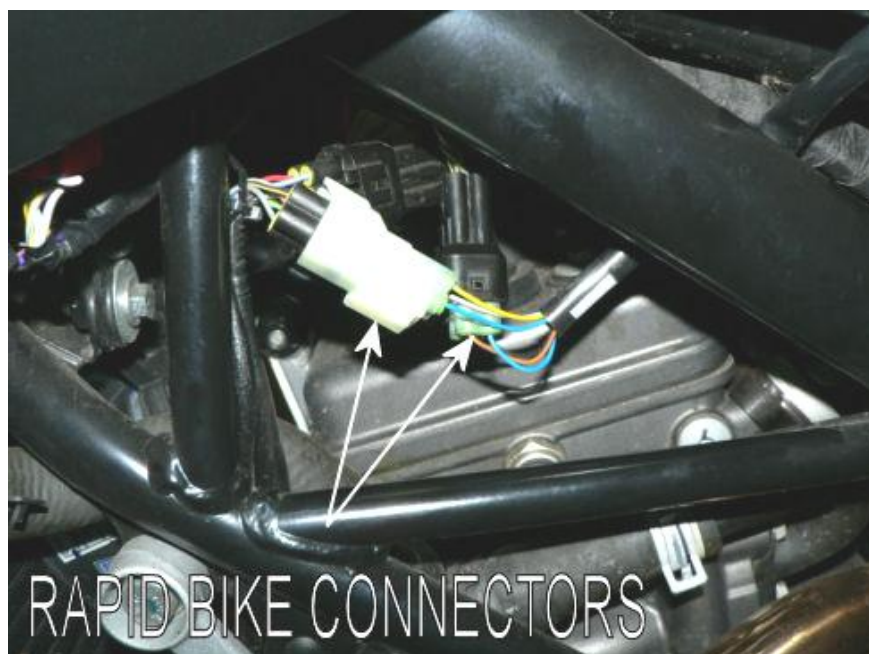
**Fig.4**

Crankshaft sensor section

7. Locate and disconnect the black 4 pin connector placed under the fuel tank on the left hand side of the bike (Fig.5).

**Fig.5**

8. Connect the Rapid Bike connectors in-line of the stock connectors (**Fig.6**).

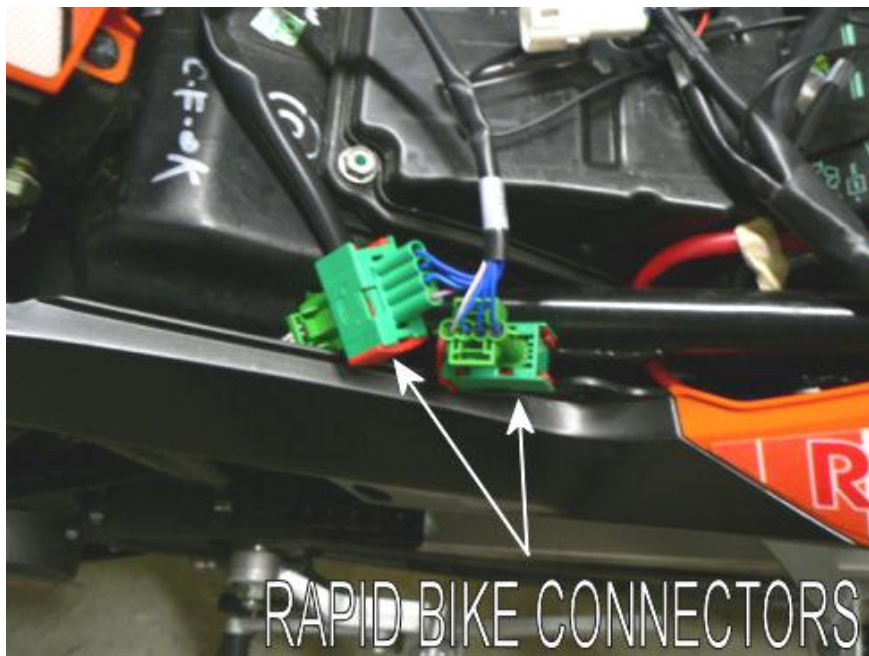
**Fig.6**

O2 sensor section

9. Locate and disconnect the green 4 pin connector placed behind the left fairing (Fig.7).

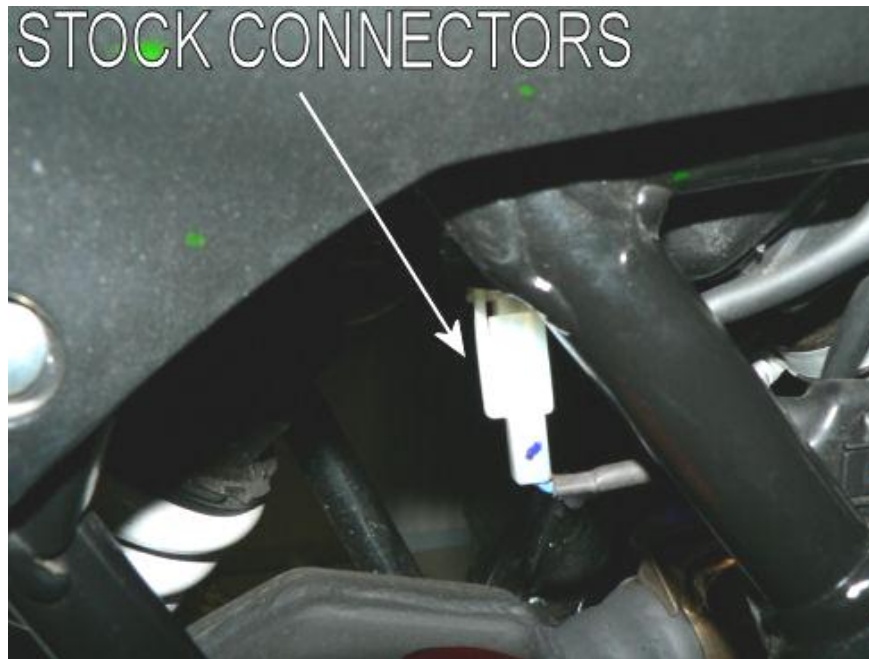
**Fig.7**

10. Connect the Rapid Bike connectors in-line of the stock wiring harness (Fig.8).

**Fig.8**

Feeding voltage section

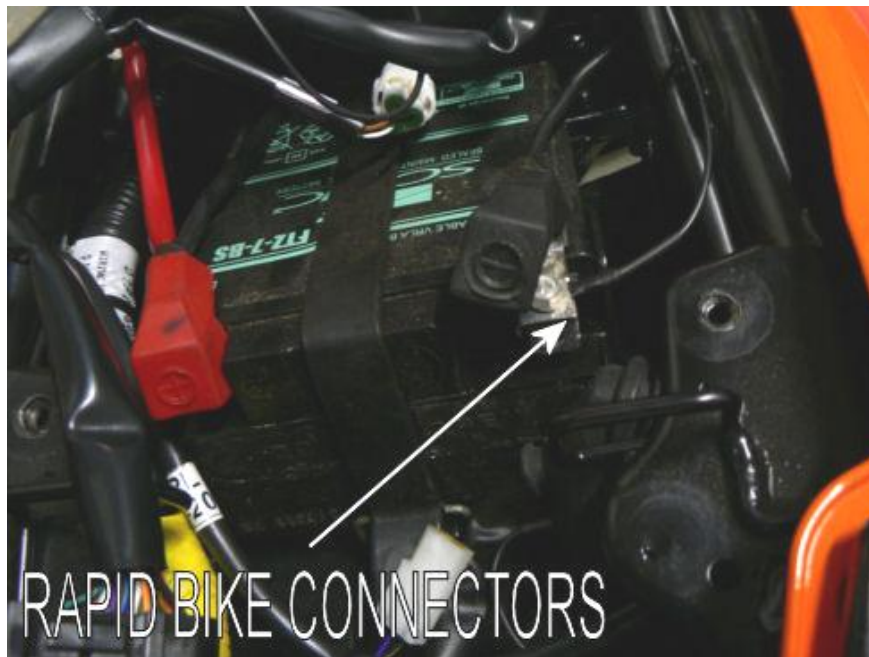
11. Locate and disconnect the white 2 pin connector placed under the fuel tank on the right hand side of the bike (Fig.9).

**Fig.9**

12. Connect the Rapid Bike connectors in-line of the stock wiring harness (Fig.10)

**Fig.10**

13. Connect the eyelet of the Rapid Bike wiring harness to the negative pole of the battery (Fig.11).

**Fig.11**

Final section

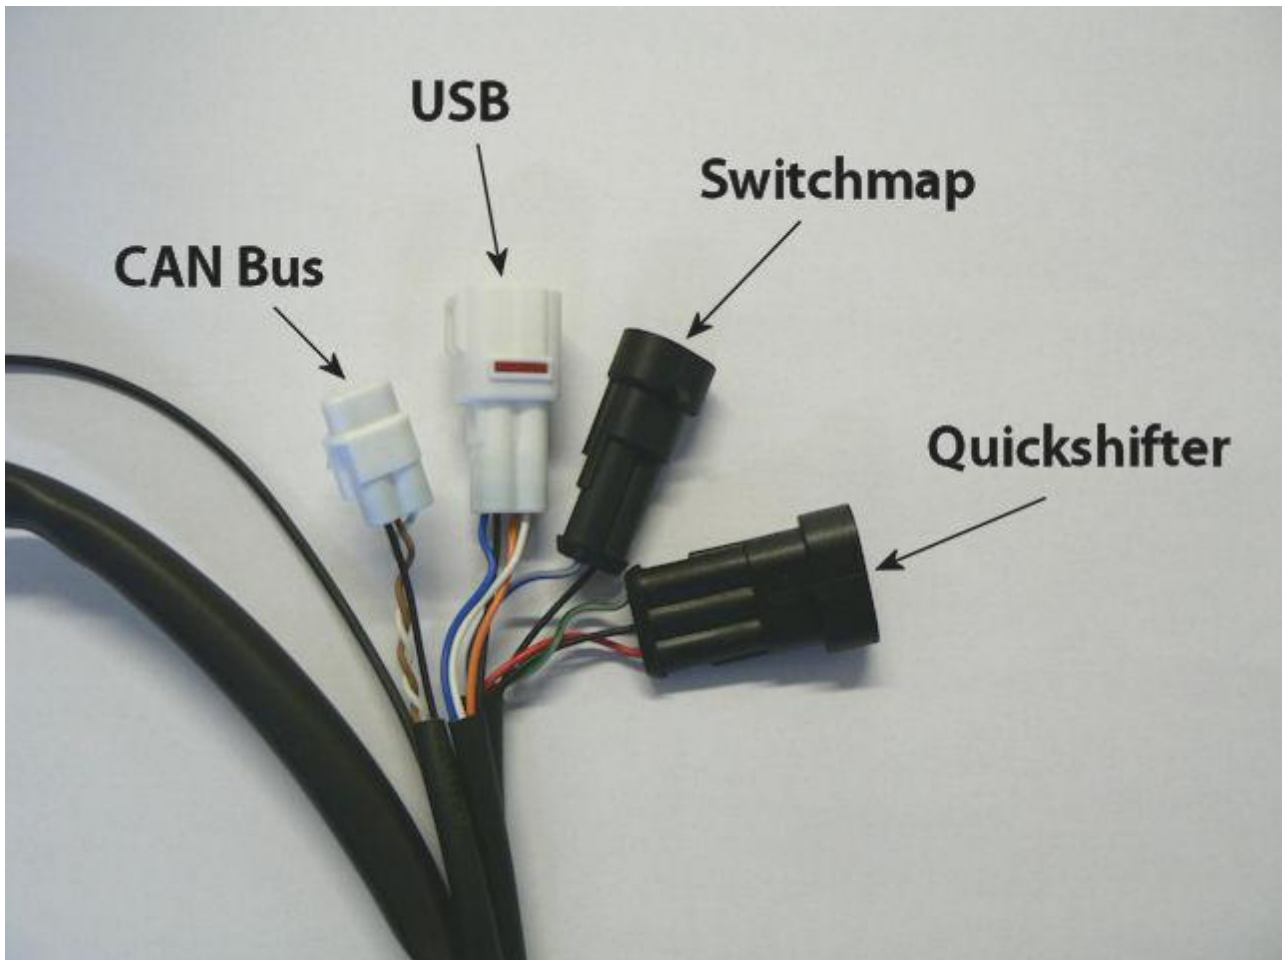
14. Connect Rapid Bike module to the wiring harness.
15. Check proper connection of all connectors.
16. Fix the module in the gloves compartment (Fig.12).

**Fig.12**

Accessories section

The Rapid Bike wiring has four other connections for the accessories:

- Connection for the quickshifter sensor (black 3 pin connector)
- Connection for the handlebar switchmap (black 2 pin connector)
- Connection for the CAN Bus interface (white 3 pin connector)
- Connection for the USB interface (white 4 pin connector)

**Dimsport Srl**

Zona Industriale Madonnina - Loc. San Iorio, 8 B

15020 SERRALUNGA DI CREA (AL) - ITALY

T (+39) 0142.9552 F (+39) 0142.940094

E-mail: info.rapidbike@dimsport.it